

MODELS

SELF CLOSING PILLAR TAPS

- RBA1015-600** 'Benefit Lever' Tap
- RBA1043-600** 'Alpha' Self Closing Tap
- RBA1044-600** 'Rio' Self Closing Tap
- RBA1047-600** Self Closing 'Gooseneck' Tap



'ALPHA'
RBA1043-600



'RIO'
RBA1044-600



'GOOSENECK'
RBA1047-600



'BENEFIT LEVER'
RBA1015-600




As improvements in the design and performance of RBA products are continuous, specifications may be subject to change without notice. The illustrations and descriptions herein are applicable to production as of the date of this Installation Instructions Sheet. Revised 03/22 © 2022 by RBA Group II/Model RBA1015, RBA1043, RBA1044 & RBA1047-600/0322

Technical Data


Inlet	1/2" BSP [G1/2"]
Operating pressure	200 – 500 kPa
Flow Time	7 seconds nominal [ALPHA & RIO] 15 seconds [GOOSENECK]
Maximum Temp.	55°C
Flow Rate	4.5L per minute/5.5L per minute
Warranty	2 years

Dimensions


RBA1043-600 'Alpha'

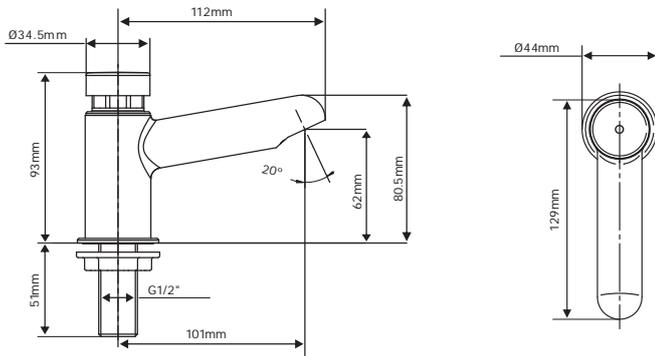


RBA1044-Series 'Rio'

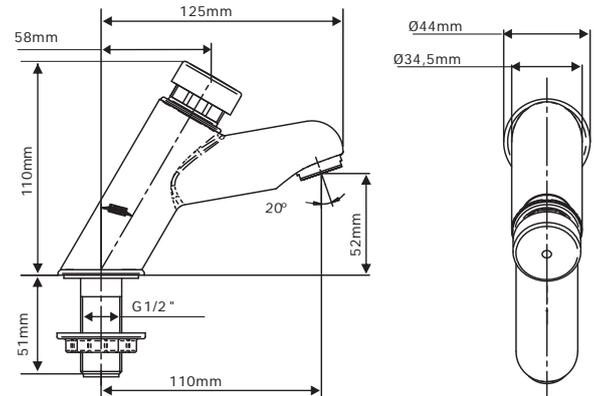

RBA1047-600 'Gooseneck'

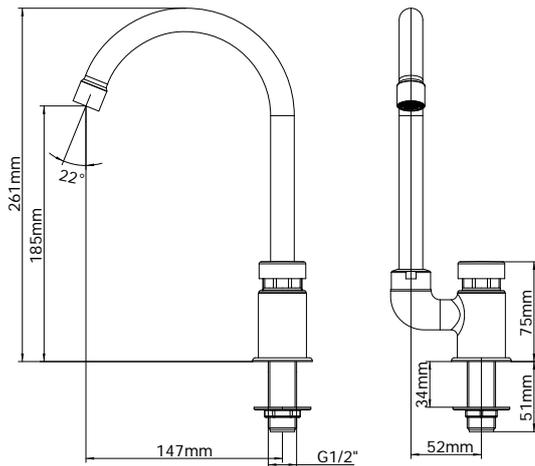

RBA1015-600 'Benefit HD'

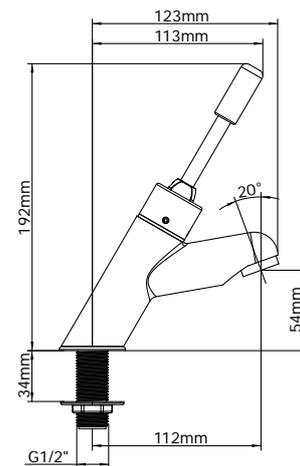

Description

Self closing pillar taps are designed for public areas, available in bright chrome finish cast from dezincification resistant brass alloy. Single connection to water supply line, to either cold or pre-mixed water.

- RBA1015-600 'Benefit Lever' Basin Pillar Tap - 6 Star WELS, 4.5Lpm
- RBA1043-600 'Alpha' Basin Pillar Tap DR - Chrome - 6 Star WELS, 5.5Lpm
- RBA1044-600 'RIO' Basin Pillar Tap DR - Chrome - 6 Star WELS, 4.5Lpm
- RBA1047-600 'Gooseneck' Basin Pillar Tap DR - Chrome - 6 Star WELS, 5.5Lpm

Installation


1. Installation must be carried out in accordance with local authority requirements.
2. Flush the line thoroughly, and remove all dirt and grit from the line before connecting the tap.
3. Install the tap in the basin, tightening lightly with spanner or grips.
4. Connection may be made with either flexible S/S braided hose, or copper tube and compression fittings.
5. Before turning on the water remove the aerator and flush the tap.
6. Replace the aerator and check for leaks.
7. Fit appropriate coloured indicator to the handle.

Troubleshooting

Problem	Probable Cause	Solution
No flow or low volume	Water turned off Water outlet blocked	Turn on Remove the blockage
Water flows continuously or Short / long flow time	Cartridge blocked with dirt Cartridge damaged Valve direction incorrect	Remove and clean* Replace the cartridge*
Leak under knob	Cartridge damaged	Replace the cartridge*

*To remove the aerator and cartridge, see "Spare Parts" to choose appropriate tool. [Not supplied with the product].

Spare Parts

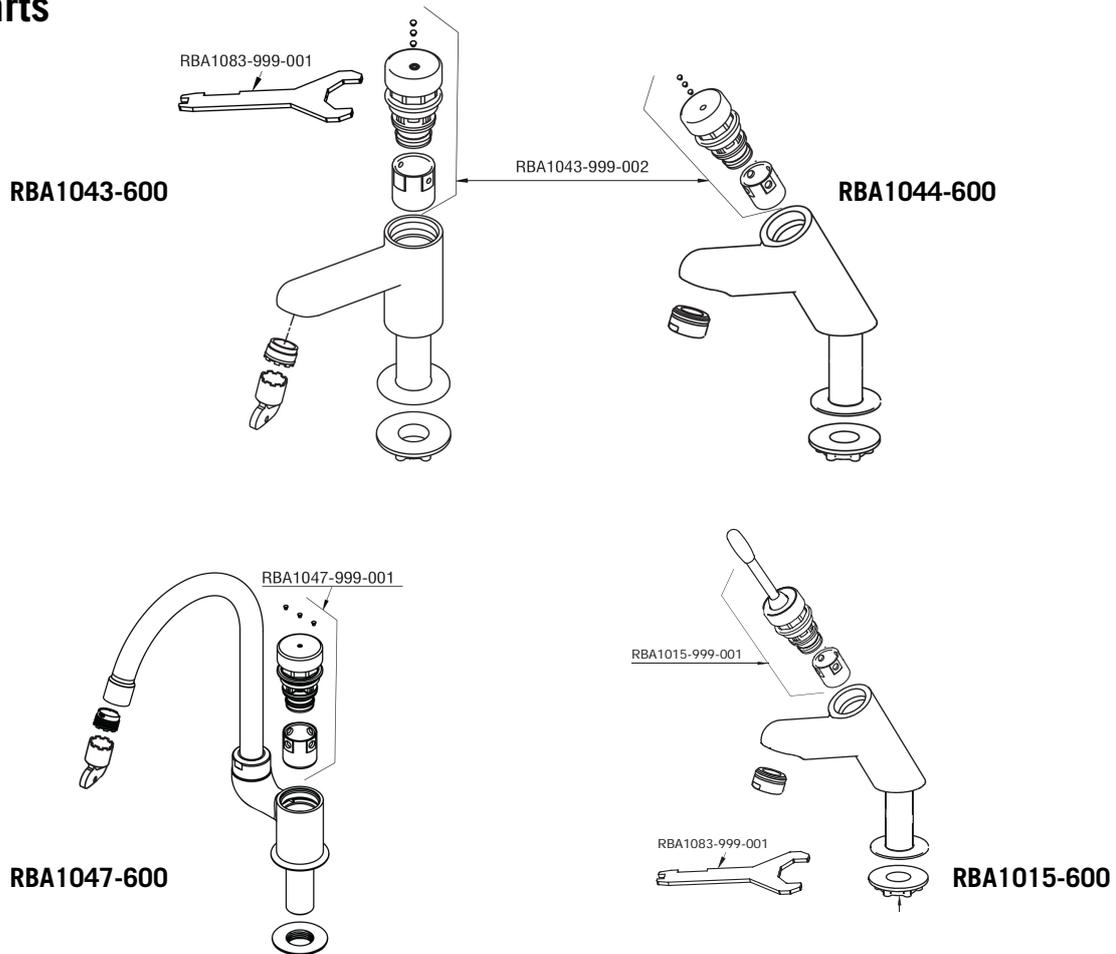

RBA Code No.	Description
RBA1015-999-001	Cartridge and Handle
RBA1043-999-002	Cartridge with Coloured Plugs 7 seconds
RBA1047-999-001	Cartridge with Coloured Plugs 15 seconds
RBA1083-999-001	Spanner
RBA1083-999-010	Anti-Rotational Heavy Duty Locknut

Note: This product should be installed, by suitably qualified persons, in a fit for purpose application, to suitable materials, using suitable fixings and comply with any relevant codes. It should be inspected periodically for signs of wear and tear that may affect performance or safety.

Dimensions are subject to manufacturer's tolerance of +/-10mm. Rough-in should be completed with each fixture.

Important: Installation Instructions are subject to change without notice.

Please visit **our websites** for latest revision.