

MODELS SECURITY BASIN

Security Basin RBA8880-100






As improvements in the design and performance of RBA products are continuous, specifications may be subject to change without notice. The illustrations and descriptions herein are applicable to production as of the date of this Installation Instructions Sheet. Revised 11/23 © 2023 by RBA Group II/Model RBA8880-100/0324

SYDNEY | MELBOURNE | BRISBANE | PERTH | AUCKLAND Australia 1300 788 778 www.rba.com.au | New Zealand 0800 722 111 www.rbagroup.co.nz

Rough-In


Security wash basin - front fixed fixing and connection detail (viewed from front of basin)

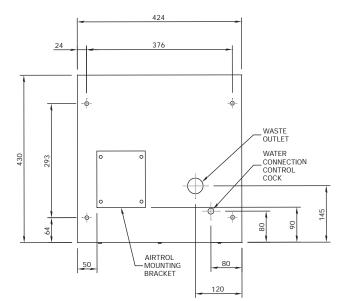

Refer to "Installation Instructions Air-Trol Valve Model 03-M" for specific valve requirements. If the Air Trol valve is to be located within the basin frame, the water supply should be terminated with a control cock as in fig. 1. Waste outlet location in fig 1 is for 40 mm plastic "P" trap. This location may vary subject to type of trap used, and should be confirmed prior to rough-in.

Installation

- The Air Trol valve may be fixed to the wall, as in fig 1, and connected to the water supply prior to installing the basin.
- The basin should be fitted at a height and location nominated by the specifier, or the relevant code.
- Remove the access panel from the bottom of the basin using the security bit provided. Ensure the basin is level, then fix it to the wall through the 4 fixing points shown in fig 1, using appropriate wall anchors and bolts, provided by others.
- Fit the trap, make the necessary water and activation tube connections, and turn on the water supply. Supply lines should be flushed thoroughly prior to connection.
- Adjust the flow time and check for leaks etc, then replace the access panel.

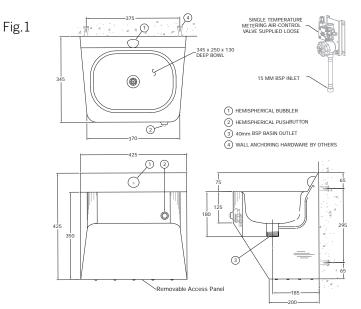

Note: This product should be installed, by suitably qualified persons, in a fit for purpose application, to suitable materials, using suitable fixings and comply with any relevant codes. It should be inspected periodically for signs of wear and tear that may affect performance or safety. Dimensions are subject to manufacturer's tolerance of +/-10mm. Rough-in should be completed with each fixture. **Important:** Installation Instructions are subject to change without notice. Please visit **our websites** for latest revision.