# INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS



#### **RBA Grab Rails**

RBA4000 Series RBA4008 Series RBA4040 Series RBA4090 Series RBA4098 Series RBA4110 Series RBA4118 Series RBA4041 Series RBA4091 Series









Model RBA Grab Rails

Date 26/09/17

Supercedes all previous

## INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

## YOU ARE RESPONSIBLE FOR THE SAFE OPERATION OF THIS UNIT

#### Installation:

- 1. Measure site to find correct location for Grab Rails(s) ensuring it is installed to meet disabled code AS1428.1-2009 (Amdt. 2010) and local building codes where required.
- 2. Mount concealed mounting flanges to the wall using wall fixings (supplied by others) where required.
- 3. Slide Covers over mounting flanges ensuring raised edges of the flange are lined up with dimples of the bracket cover. Press into place.

### Warning:

Grab Rails are no stronger than the anchors or walls to which they are attached, and therefore, must be firmly secured in order to support the loads for which they are intended.

### Important:

Installation Instructions are subject to change without notice. Please visit www.rba.com.au for latest revision. Dimensions are subject to manufacturer's tolerance of +/-10mm. Rough-in should be completed with each fixture.