



INSTRUCTIONS FOR INSTALLATION


Bobrick Cubicle Collection B-545 Towel Bar

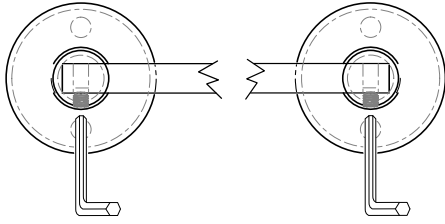


1. Remove concealed setscrew from left and right post.

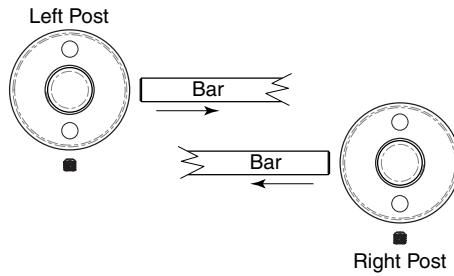


2. Slide out bar from left and right post.

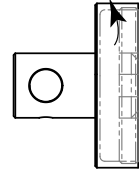


3. Unscrew flange cover from left and right mounting flanges.

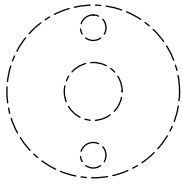


4. Use mounting flange holes as a template to drill holes on wall at the appropriate height and width of bar.

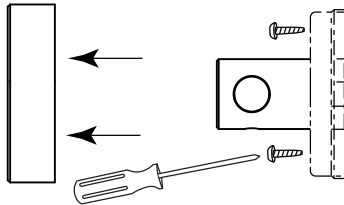


5. Insert mounting screws into left mounting flange at wall.

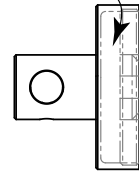


6. Screw flange cover onto left mounting flange.

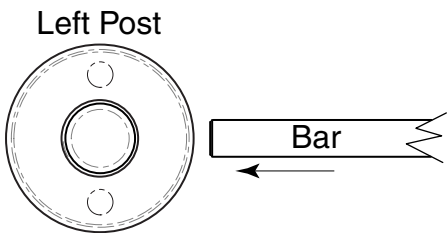


7. Slide bar into left post.

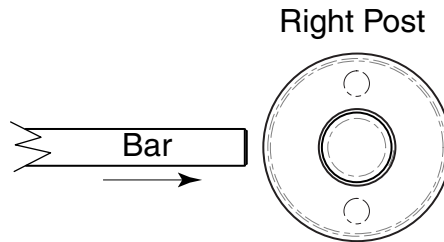


8. Place flange cover onto right post. Do not screw on. Slide bar into right post.

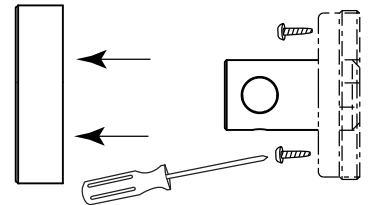

9. Insert mounting screws into right mounting flange at wall.

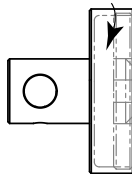

10. Screw flange cover onto right mounting flange.

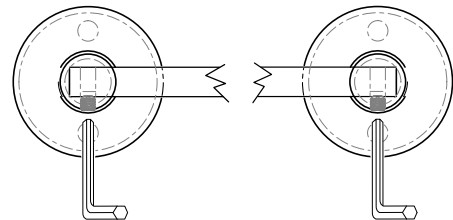

11. Replace concealed setscrews into left and right posts.



BUILDING VALUE SINCE 1906

© 2014 by Bobrick Washroom Equipment, Inc.
Form No. 545-69 Issued 1/10/14

BOBRICK WASHROOM EQUIPMENT, INC.

Global Headquarters:
11611 Hart Street, North Hollywood, California 91605-5882 • Tel: +1-818-764-1000 • FAX: +1-818-503-9941
Email: international@bobrick.com