

MODEL

Recessed Ligature Resistant Toilet Roll Holder

RBA8140-500


Recessed Ligature Resistant Toilet Roll Holder




As improvements in the design and performance of RBA products are continuous, specifications may be subject to change without notice. The illustrations and descriptions herein are applicable to production as of the date of this Installation Instructions Sheet. Revised 07/21 © 2021 by RBA Group II/Model RBA8140-500/1021

Installation Instructions


1. Provide 159mm x 261mm wall opening and backing [1] Minimum 102mm depth from finished wall.
2. Fasten mounting frame [2] into wall opening [1] using installer provided fasteners [3].
Wall anchors by others as required to suit wall conditions.

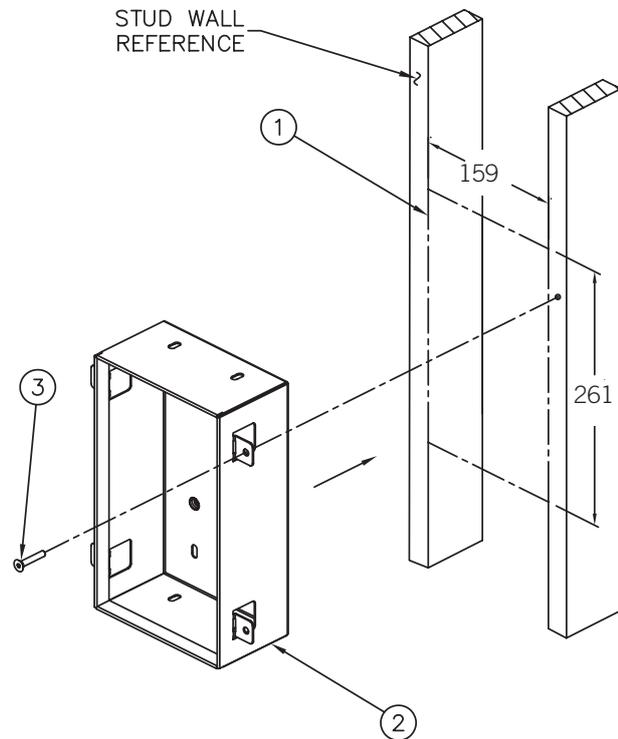

3. Install toilet paper holder [4] into mounting frame [2] and secure using Screws [provided] [5].

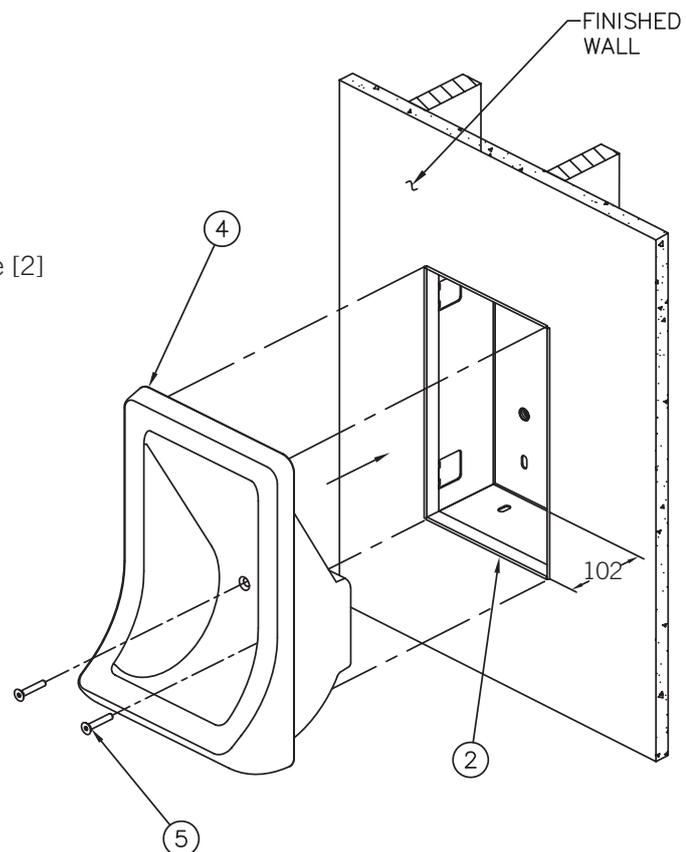

Installation Instructions

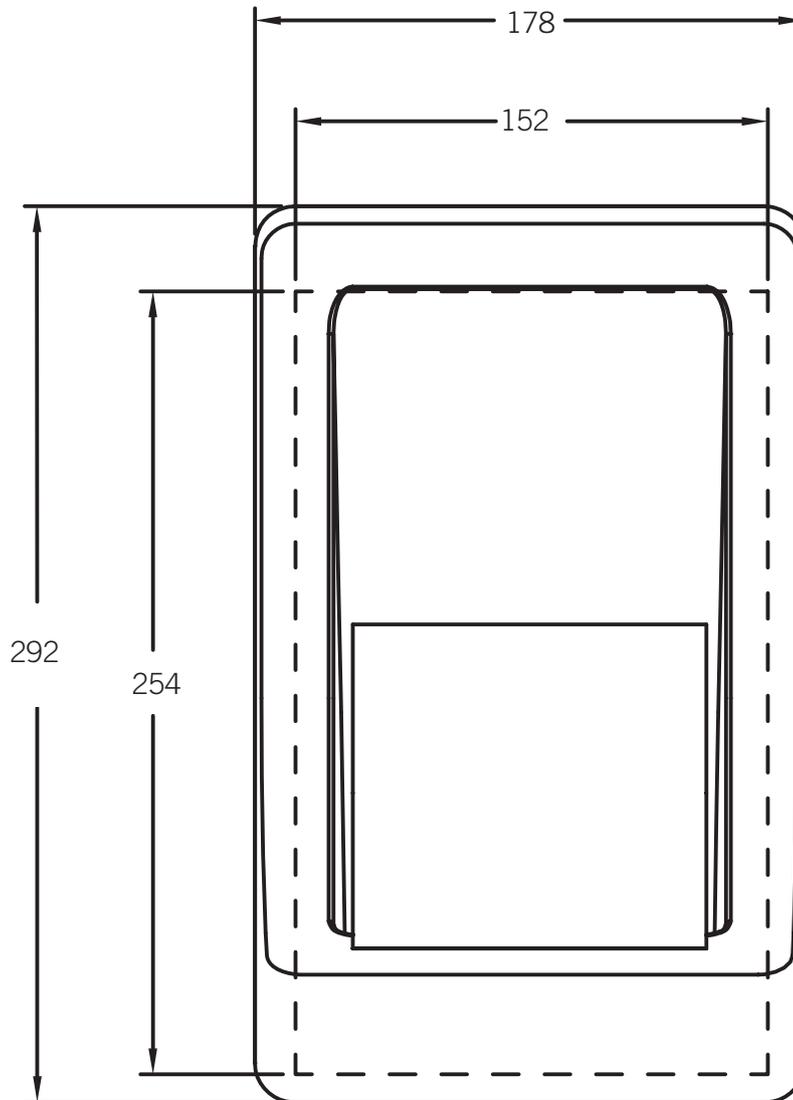

Front View

Locate item to conform with applicable codes for accessibility

After installation, all joints require security sealant by installer to eliminate gaps between wall and fixture.

Note: This product should be installed, by suitably qualified persons, in a fit for purpose application, to suitable materials, using suitable fixings and comply with any relevant codes. It should be inspected periodically for signs of wear and tear that may affect performance or safety.

Dimensions are subject to manufacturer's tolerance of +/-10mm. Rough-in should be completed with each fixture.

Important: Installation Instructions are subject to change without notice. Please visit **our websites** for latest revision.

