


RBA4600-999-005

RBA4600-999-005 Dress Plate Kit for Grab Rails

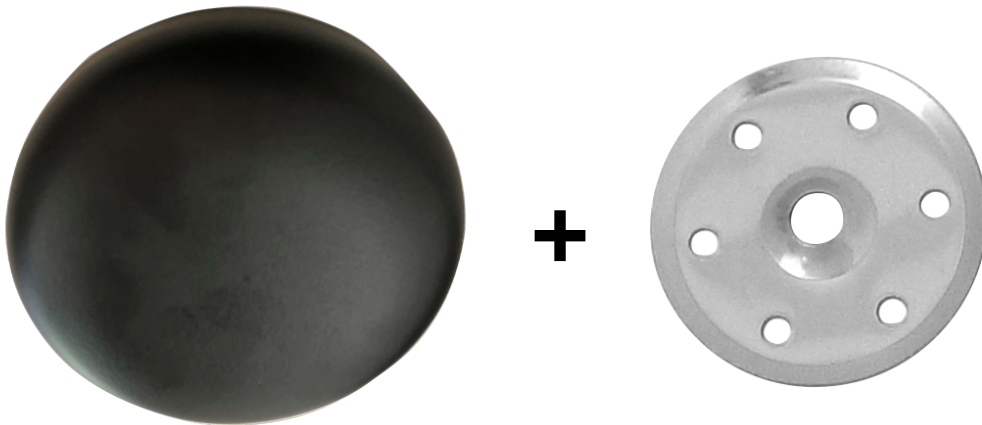

As improvements in the design and performance of RBA products are continuous, specifications may be subject to change without notice. The illustrations and descriptions herein are applicable to production as of the date of this Installation Instructions Sheet. Revised 07/21 © 2021 by RBA Group II/Model RBA4600-999-005/0721

You Are Responsible For The Safe Operation Of This Unit

Installation:

1. Measure site to find correct location for Grab Rails(s) ensuring it is installed to meet disabled code AS1428.1 and local building codes where required.
2. Mount concealed mounting flanges to the wall using wall fixings (supplied by others). If using kit to conceal penetrations in a toilet partition ensure fixings (by others) are sufficient to meet the practical use of the grab rail and will allow the cover to sit flush to the wall.
3. Apply a uniform bead of silicone around the outside of the mounting plate.
4. Slide cover over mounting plate and press into place.
5. Using a soft cloth wipe away excess silicone.

Warning:

Grab Rails are no stronger than the anchors or walls to which they are attached, and therefore, must be firmly secured in order to support the loads for which they are intended.

Important:

Installation Instructions are subject to change without notice. Please visit www.rba.com.au for latest revision. Dimensions are subject to manufacturer's tolerance of +/-10mm. Rough-in should be completed with each fixture.

