

Your unit can be installed to meet ADA regulations when and where applicable. Refer to Federal Register, Volume 56, No 144 28 CFR Part 36.

You are responsible for the safe operation of this unit.

IMPORTANT. RETAIN FOR FUTURE REFERENCE. READ CAREFULLY. IMPORTANTE. GUÁRDELO PARA FUTURAS CONSULTAS. LEER ATENTAMENTE. IMPORTANT. À CONSERVER POUR INFORMATION. À LIRE ATTENTIVEMENT. WICHTIG. ZUR SPÄTEREN BEZUGNAHME AUFBEWAHREN. BITTE SORGFÄLTIG DURCHLESEN.



Koala Kare Products | 6982 S Quentin St. | Centennial, CO 80112 We Care for Kids. Toll Free: 888.733.3456 | 303.539.8300 | Fax: 303.539.8399 www.koalabear.com

OPERATING INSTRUCTIONS

Please Note:


To assure proper installation, it is suggested that a qualified person or carpenter install the Koala Baby Changing Station. Koala Kare Products will not be responsible if the station is not installed properly.

Koala Baby Changing Stations have been tested to hold a substantial static load. The unit must be attached to a permanent wall that is capable of holding a substantial load.

Inspection Criteria:

A properly maintained baby changing station:

- Opens and closes smoothly
- Offers parents liners through a fully stocked liner dispenser. (Dispenser built into unit.)
- Provides a clean, convenient place for customers to attend to their children.

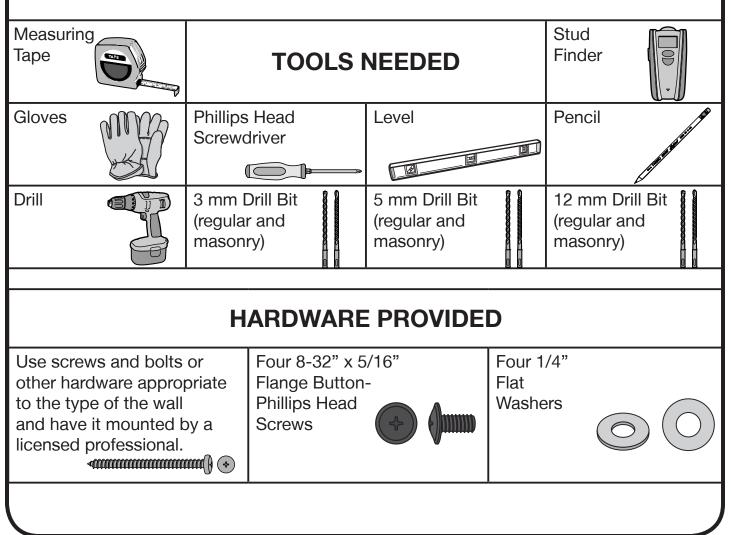

INSTALLATION INSTRUCTIONS Horizontal Baby Changing Station Surface Mounted Model Number KB200 **Keyhole Slot** 6) Bed and Metal **Mounting Chassis** Wall Mount Liner Dispenser

Step 1. Inspect Contents

Remove changing station from the shipping container and check for any freight damage. If damage is found, please call Koala Kare Products' Customer Service at 303.539.8300. Remove "Installation Kit" and "Operator Kit" from box. Please give "Operator Kit" to facility manager or operator. Box should contain two pieces: the bed and metal mounting chassis and the wall mount liner dispenser. Identify the best location for installing the unit.

INSTALLATION INSTRUCTIONS

Step 2. Prepare Mounting Surface

Please identify the appropriate hardware for the mounting surface.

For Standard Installation


Remove the bed and chassis from the box and select the wall area where the unit will be installed. Make sure you have taken into consideration the operating clearance of 24.1 cm on both sides of the exposed chassis and 58.9 cm from wall surface when open. Measure from the floor 107 cm on stud center and mark the wall. The mounting holes are designed for 40.6 cm stud centers. Ensure the locations you have marked for the mounting holes are level before drilling. Drill pilot holes for keyhole mounting using a 3 mm regular drill bit.

For Masonry or Tile over Stud Wall

Use a 5 mm masonry drill bit for the pilot hole until you hit the stud. Change bit to 3 mm regular drill bit.

For Metal Stud or Concrete Block


If the wall has wood studs that are not on 40.6 cm centers, has metal studs or an underlying surface of concrete block, drill with a 12 mm masonry bit. (You may have to purchase toggles before installing.) You must allow a minimum of inside wall space for toggles to turn depending on toggles used. Insert and tighten toggles.

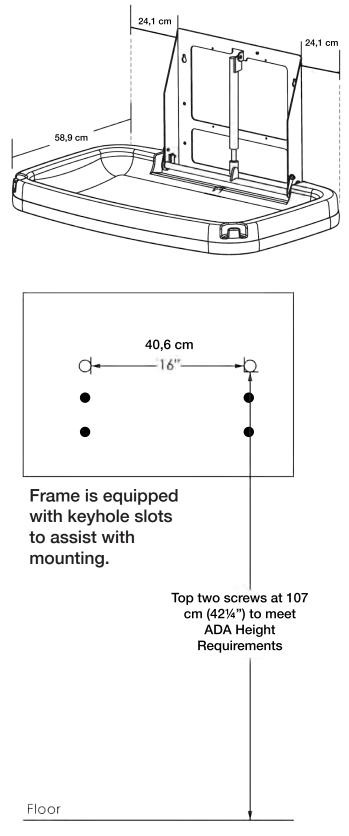


INSTALLATION INSTRUCTIONS

Important:

In Step 3, <u>SIX</u> screws must be mounted to the chassis to ensure proper load bearing capacity! Use only screws and hardware appropriate for the type of wall where the baby changing station is being mounted.

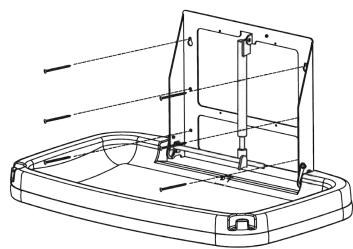

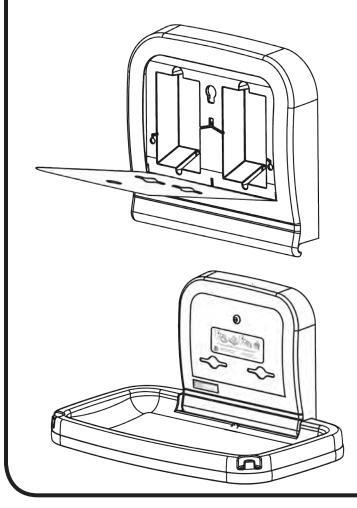

Step 3. Mount Bed and Chassis

Use only screws and hardware appropriate for the type of wall where the baby changing station is being mounted. Tighten top two screws so that they are flush with the wall. Use the four lower holes as a guide to mark and drill pilot holes. Use remaining four screws and four washers to complete installation of bed and mounting bracket. Insert washers over lower four screws. All <u>SIX</u> screws and four washers must be mounted to the chassis.

Step 4. Install Liner Dispenser

Ensure liner dispenser is free from damage. Remove key, unlock, and open liner dispenser lid. This will expose liner dispenser mounting holes. Line up dispenser mounting holes onto chassis and secure with the four screws provided. Close and lock the liner dispenser door.

Step 5. Complete Installation

Clean work area and inspect unit to ensure it opens and closes smoothly. Give Operator Kit and key to the facility operator. Replacement parts and additional liners can be purchased from your local distributor or by calling Koala at 1.303.539.8300.

Before mounting this changing station, ensure the wall surface where the unit will be mounted can support a maximum weight of 150 kg.

EN 12221-1:2008+A1:2013

WARNING: Do not leave the child unattended.

All assembly fittings shall always be correctly tightened and checked regularly.

Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the changing unit.

Do not leave the child unattended. The changing unit is intended for infants age up to 12 months, with a maximum weight of 11kg.

Do not use changing unit if any parts are broken or missing.

A changing pad is not required for this product.

Additional or replacement parts shall only be obtained from the manufacturer or distributor.

Unit should be cleaned once or more daily with a clean nylon brush and spray disinfectant.



ADVERTENCIA: Nunca deje al niño solo en el cambiador.

Todos los accesorios del montaje deben ajustarse perfectamente y revisarse periódicamente.

No olvide el riesgo de incendio que la presencia de fuego u otras fuentes de calor, como estufas eléctricas, de gas, etc. en las proximidades del cambiador puede suponer.

Límpielo y desinféctelo una vez al día o más, según la frecuencia de uso.

Nunca deje al niño solo en el cambiafor. La unidad está diseñada para bebés de hasta 12 meses de edad, con un peso máximo de 11kg. Las piezas de repuesto o adicionales solamente deberán adquirirse al fabricante o distribuidor.

No utilice el cambiador si faltan piezas o alguna pieza está rota.