

RBA4601-SERIES

RBA4601-011

Raffaello 90° Ambulant Grab Rail, White

RBA4601-018

Raffaello 90° Ambulant Grab Rail, Matte Black

RBA4601-019

Raffaello 90° Ambulant Grab Rail, Chrome



* RBA4601-019 shown



Global-Mark.com.au®
Sourced/ Supplied under QMS

As improvements in the design and performance of RBA products are continuous, specifications may be subject to change without notice. The illustrations and descriptions herein are applicable to production as of the date of this Installation Instructions Sheet. Revised 03/23 © 2023 by RBA Group II/Model RBA4601-Series/0323

You Are Responsible For The Safe Operation Of This Unit

Attention

For optimum installation, use at least 3 suitable screws for each wall plate. Screws should be selected to suit the wall type. Grab rails are no stronger than the anchors or walls to which they are attached, and therefore, must be firmly secured in order to support the loads for which they are intended.

Maintenance and Cleaning Instructions

Do not use detergents containing bleach, acids, alkalis, or chlorine or abrasive products. Do not use abrasive objects (e.g. scouring pads). Do not use chemicals that can damage plastic. Clean the surface with water and a neutral detergent; rinse carefully and dry with a clean cloth. If alternative cleaning methods and/or chemicals are used, warranty may become void.

Important Warnings


Exceeding the maximum load values may cause permanent product damage. If this happens, cease use until checked by a specialised maintenance person. Improper use, such as for gymnastic exercises or as a step, may cause accidents with serious consequences. Reliable operation and product safety depend on the way the products are installed and used.

Ensure installation is performed by qualified personnel. Incorrect installation can seriously compromise product functionality.


Tools Required

- Plumbers Tape
- Screw Driver
- Extended Driver Bit
- Spirit Level

Components Supplied



1. Lay rail flat with thread facing up.

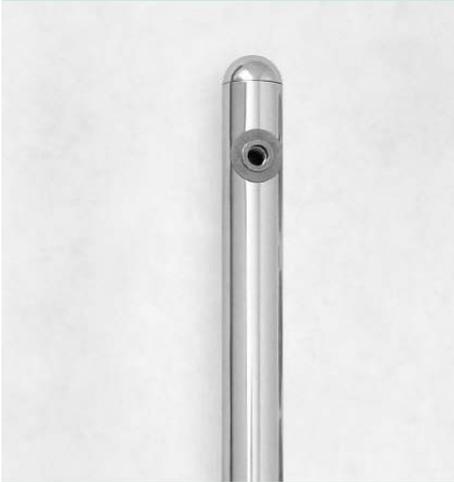

2. Place bracket post onto rail.



3. Slide flange cover over post.



4. Insert bolt through wall plate.



5. Insert fixing wall bracket and assemble.



6. Tighten.



7. Straighten the rail.



8. Mark location to install.



9. Check intended mounting location is level.



10. Position flange cover so the hole is over the screw fixing point. Secure the first screw.



11. Rotate the flange cover so the hole is positioned over a new screw fixing point.



12. Repeat until all provided screws are securing the wall plate.



13. Push flange cover over wall plate and insert flange button. Repeat for all other fixing points.

