


Model RBA4805-450

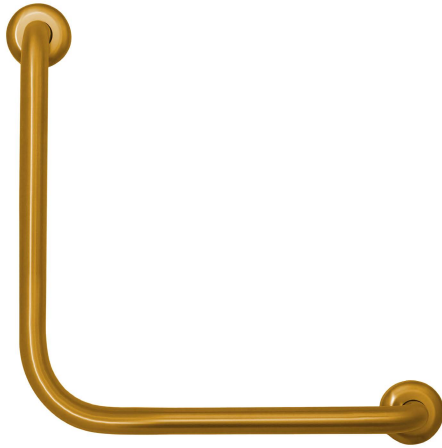

Materials & Features

Modular PVD-coated 90° angled grab rail to meet requirements of the ambulant section of AS1428.1 when installed correctly. Unit is ambidextrous, allowing installation on left or right hand side. PVD coating is a premium coating process in which a solid material is vaporised and slowly layered onto a fixture. This results in a durable, versatile finish that's more environmentally friendly than traditional coating methods. Find out more at rba.com.au/pvd.

Technical Detail

Rail: 32mm [Dia], 304 Stainless Steel
 Finish: PVD Brushed Brass
 Fixings: Supplied by others

Available Models

RBA4805-450 Modular Ambulant Grab Rail 90° 450 x 450mm | PVD Brushed Brass

Related Products

RBA4090-999-001 Single Dress Plate For Panel Mounting
RBA4330-022 Tactile Sign, Male Ambulant, 316 Stainless Steel
RBA4330-023 Tactile Sign, Female Ambulant, 316 Stainless Steel

Installation

Warning: Grab Rails are no stronger than the anchors or walls to which they are attached and, therefore, must be firmly secured in order to support the loads for which they are intended. Refer to local codes and Installation Instructions for location of fixing points, method of attachment, etc.

For best results, unit should be inspected and cleaned regularly as per the instructions in the RBA Product Warranty, Cleaning Care Guide, available on our websites.

Important: Installation instructions and current rough-in details should be furnished with each fixture. Do not rough in without certified dimensions. Dimensions are subject to manufacturer's tolerance of +/-10mm. Due to the semi-reflective nature of PVD, colours may appear differently depending on surface shape and lighting conditions. RBA recommends viewing fixtures under the same lighting conditions where they are to be installed.

